



# Rhino**PRO** 5000

## Hands - On Training Guide





 
## Content

1. How to insert the cassette
2. Get to know your printer
3. Select a Language and Font Size
4. Print a wrap-around label
5. Print a fixed length label
6. Print a patchpanel label
7. Print a module marking label
8. Print a barcode label
9. Print a wrap-around label combined with serialisation and multiple copies




## 1. How to insert the cassette


- Open the cassette door at the back of the printer

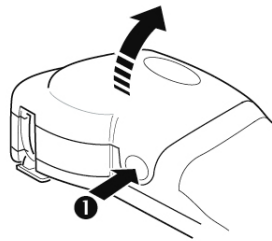

 - Adjust the red lever to the right tapewidth

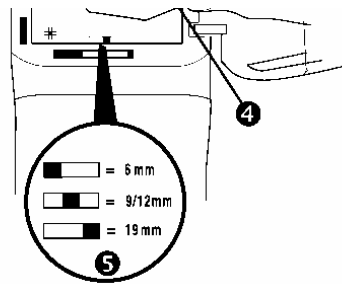


- Insert the cassette

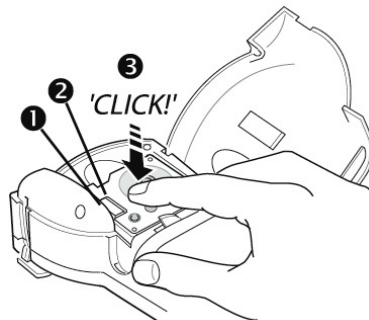 



## 2. Get to Know Your Printer

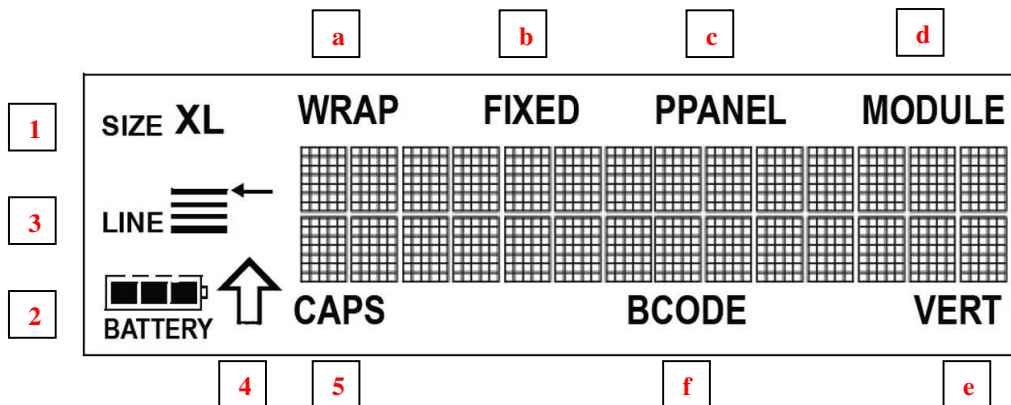 

1. Fontsize
2. Battery Life Indicator
3. Multiple Lines
4. Function Key
5. Caps Key
6. Quick Access Keys
  - a. Wrap
  - b. Fixed
  - c. Ppanel
  - d. Module
  - e. Vert
  - f. Bcode






### 3. Select a Language and Font Size

To select a Language:

1. Press Shift + Language
2. Use the arrow keys to select the language
3. Press Enter to set the language

 
To set the Font Size ( XS – S – M – L- XL) :


1. Press  Size
2. Use the arrow keys to select a font size
3. Press Enter to set the font size





## 4. Print a wrap-around label

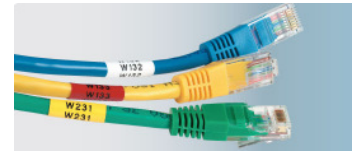


1. Press 
2. Use the arrow keys to select the cablediameter : e.g. 12 mm
3. Press Enter
4. Enter the label text: e.g. C.12345678901
5. Press Print





## 5. Print a fixed length label






1. Press  *Fixed*
2. Use the arrow keys to increase the label length to e.g. 60 mm
3. Press Enter
4. Enter the following text : e.g. Bathroom
5. Press Print



## 6. Print a patchpanel label




1. Press 
2. Enter the distance between each port : e.g. 18 mm
3. Press Enter
4. Enter the following symbol and text for the first position on the label :  
 01
5. Press 
6. Use the arrow keys to select the number of labels you wish to print : e.g. 6
7. Press Print





## 7. Print a Module Marking Label




1. Press 
2. Enter the size of a single modular component : 17,5 mm
3. Press Enter
4. Use the arrow keys to enter the total number of module blocks on one row : 3
5. Press Enter
6. Use the arrow keys to enter the size for the first module e.g. 3 and press Enter
7. Use the arrow keys to enter the size for the second module e.g. 1 and press Enter
8. Use the arrow keys to enter the size for the third module e.g. 2 and press Enter
9. Enter the text for the first module e.g. ROOM 1 and press Print
10. Press Shift + Clear to clear the text
11. Enter the text for the second module e.g. L1 and press Print
12. Press Shift + Clear to clear the text
13. Enter the text for the third module e.g. CELLAR and press Print





## 8. Print a barcode label

 




1. Press Shift +  to print barcodes
2. With the arrow keys select Code 39 and press Enter
3. Enter the text for the barcode : e.g. 2436546743
4. Press Enter
5. Press again Enter to go to the second line
6. Enter the text : Rhino PRO 5000
7. Press Print





## 9. Print a wrap-around label combined with serialisation and multiple copies



1. Press 
2. Use the arrow keys to select the cablediameter : 6 mm
3. Press Enter
4. Enter the label text: e.g. W.OO1
5. Press 
6. Use the arrow keys to select the number of labels you wish to print : e.g. 2
7. Press Shift + Print to make multiple copies of your label
8. Use the arrow keys to increase the number of copies to print : e.g. 2
9. Press Print

