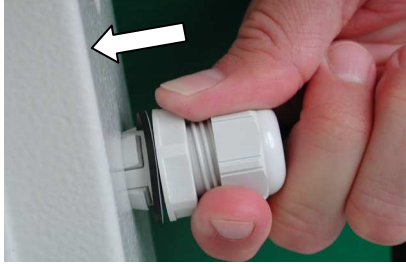


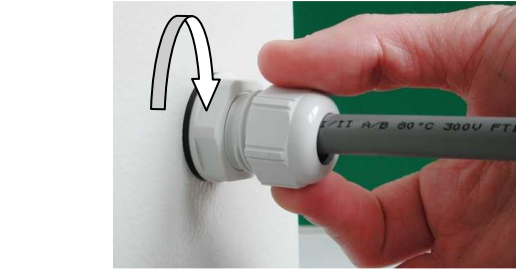
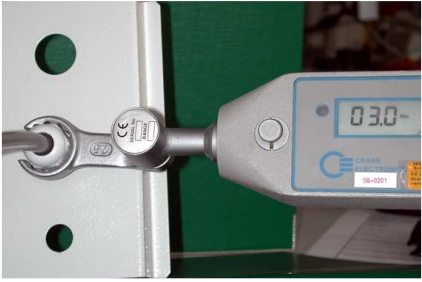





## SKINTOP® CLICK Assembly Instructions

		
<p>1. Position and press the gland into the housing. (all snap-fits have to be clicked)</p>	<p>2. Fasten the gland with counter-clockwise rotation of the pressure nut.</p>	<p>3. Lead the cable through.</p>
		
<p>4. Tighten the cap nut by the hand with a clockwise rotation during you hold the pressure nut.</p>	<p>5. Retighten the cap nut with prescribed torque.</p>	

## SKINTOP® CLICK Disassembly Instructions

		
<p>1. Position the disassembly tool and push the tool over latch to unlock.</p>	<p>2. Open latch system by pressing with both thumbs on SKINTOP® CLICK.</p>	<p>3. Push out SKINTOP® CLICK with both thumbs.</p>

Dimension	Diameter for unthreaded holes [mm]	SKINTOP® CLICK clamping-and sealing range [mm]	SKINTOP® CLICK-R clamping-and sealing range [mm]	Torque M [Nm]	   File Nr. E 79903	Temperature range: -20°C bis +100°C
Ø12	12,3 -0,2	4,5 - 7	3,5-5	1,0		
Ø16	16,3 -0,2	5 - 9	4-7	2,5		
Ø20	20,3 -0,2	7 - 13	5-10	6		
Ø25	25,3 -0,2	9 - 17	6-13	8		
Ø32	32,3 -0,2	11 - 20	7-15	7		

Deutsche Montageanleitung siehe Rückseite